


## Remote Touch

The Remote Touch can be used to operate the Remote Touch screens.


### Basic operation

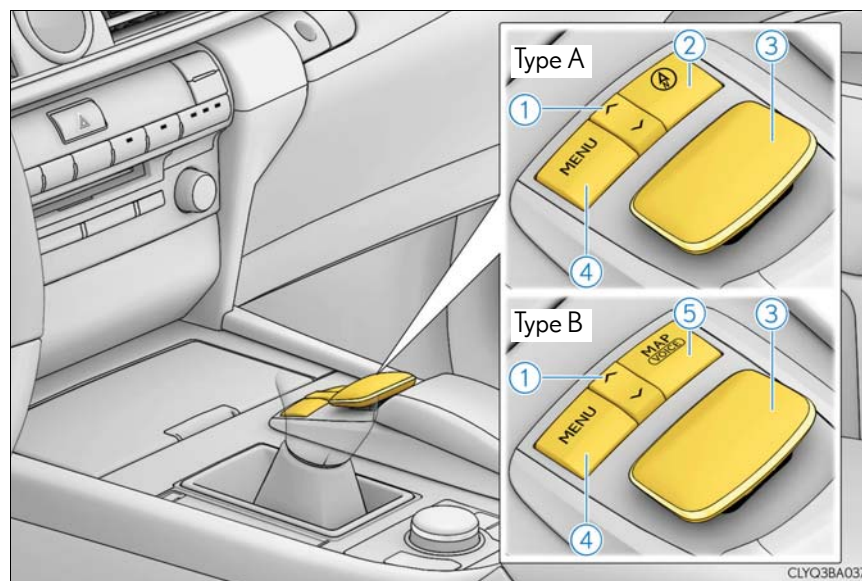

- ① “∧・∨” button  
Press this button to scroll through lists.
- ② “COMPASS” button  
Press this button to display the compass mode screen.
- ③ Remote Touch knob  
Move in the desired direction to select a function, number and screen button.  
Push the knob to enter the selected function, number and screen button.  
Feedback force, pointer sound volume, on or off of selection sounds, etc. can be changed. Refer to the “Owner’s Manual” and “Navigation System Owner’s Manual”.
- ④ “MENU” button  
Press this button to display the “Menu” screen.
- ⑤ “MAP/VOICE” button  
Press this button to display the vehicle’s current position.

## Menu


### ► Vehicles without navigation system

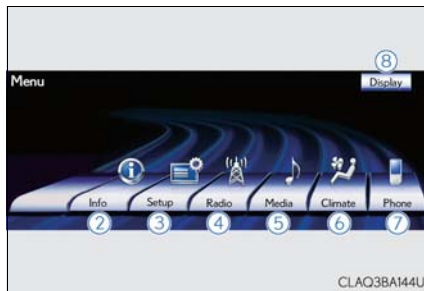


Press the "MENU" button on the Remote Touch to display the "Menu" screen.

- ① "Destination" (→P.67)
- ② "Info" or "Info/Apps"
- ③ "Setup"
- ④ "Radio" (→P.79)
- ⑤ "Media" (→P.78)
- ⑥ "Climate" (→P.84)
- ⑦ "Phone" (→P.72)
- ⑧ "Display" (→P.66)

### ► Vehicles with navigation system

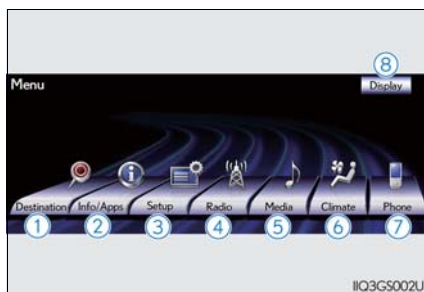

## Side Display

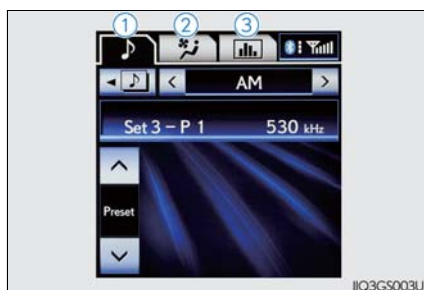



The following functions can be displayed and operated on the "Side Display".

- ① Audio (→P.78)
- ② Air conditioning system (→P.84)
- ③ Vehicle information




To display detailed information on the "Main Display".

### ■ Selecting the operation screen

When selecting the "Side Display", move the Remote Touch knob to the right until  is displayed at the boundary between the "Main Display" and the "Side Display", and then move it further to the right. When selecting the "Main Display", move the Remote Touch knob to the left until  is displayed at the boundary between the "Main Display" and the "Side Display", and then move it further to the left.

## ■ Display

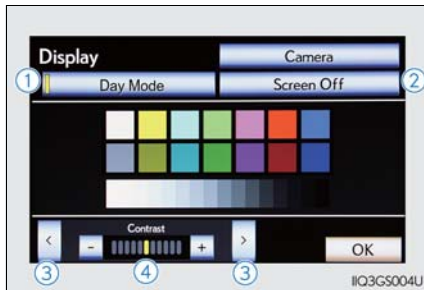

Press the "MENU" button on the Remote Touch and select "Display" on the "Menu" screen.

- ① Displays the screen in "Day Mode" with the headlight switch on
- ② Turns the screen off
- ③ Change function
- ④ Adjust contrast/brightness

## ■ Screen scroll operation



To scroll over the map, place the pointer in a position near the desired destination and then press and hold the Remote Touch knob.

- ① Indicates the street name, city name, etc. for the selected point
- ② Displays various information for the selected point
- ③ Indicates the distance from the current position to the pointer
- ④ Switches the screens
- ⑤ Zooms in on the map
- ⑥ Zooms out on the map


## ■ Setting a route

While route guidance is operating, you can change the route using the following method.



Select "Route".

The following settings can be accessed

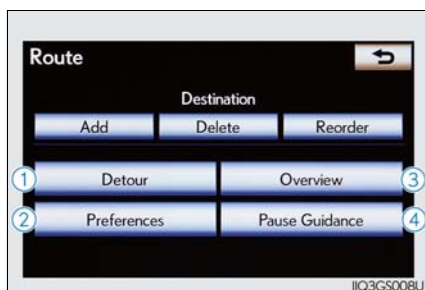

- ① Detour setting
- ② Route preferences
- ③ Route overview
- ④ Pause and resume route guidance

Some functions are unavailable while the vehicle is in motion. Refer to the "Navigation System Owner's Manual".

## Navigation System (if equipped)

### Register home



- 1 Press the "MENU" button on the Remote Touch.  
Please refer to page 64 for the Remote Touch operation.


- 2 Select "Setup".



- 3 Select "Navigation".



- 4 Select "Home".
- 5 Select "Set Home".
- 6 Select "Address".

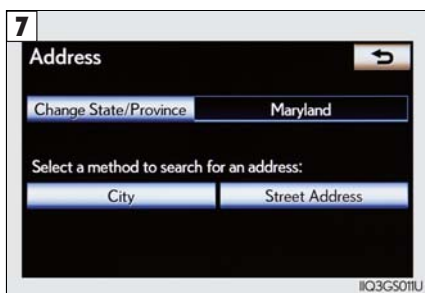


- 7** Select "City".
- 8** Input a city name and select "OK".
- 9** Select the screen button of the desired city name from the displayed list.  
For security reasons, use a point close to your home instead of your actual home address.
- 10** Input the street name and select "OK".
- 11** When the desired street name is found, select the corresponding screen button.
- 12** Input a house number and select "OK".
- 13** Select "Enter".
- 14** Select "OK".

## ■ Destination input

### ■ Search by address




- 1** Press the "MENU" button on the Remote Touch.  
Please refer to page 64 for the Remote Touch operation.
- 2** Select "Destination".

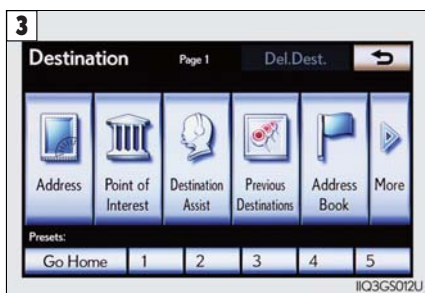

- 3** Select "Address".

► Select by city name

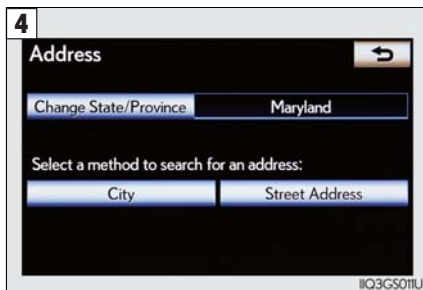

4 Select "City".



5 Input a city name and select "OK".

6 Select the screen button of the desired city name from the displayed list.

7 Input the street name and select "OK".


8 When the desired street name is found, select the corresponding screen button.

9 Input a house number and select "OK".

10 Select "Go to".

11 Select "OK".

► Select by street address

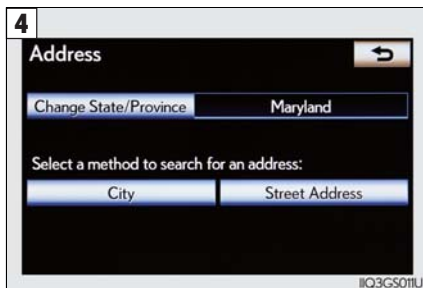

4 Select "Street Address".

5 Input a house number and select "OK".

6 Input the street name and select "OK".


7 When the desired street name is found, select the corresponding screen button.

8 Input a city name and select "OK".

9 Select the screen button of the desired city name from the displayed list.

10 Select "Go to".

11 Select "OK".

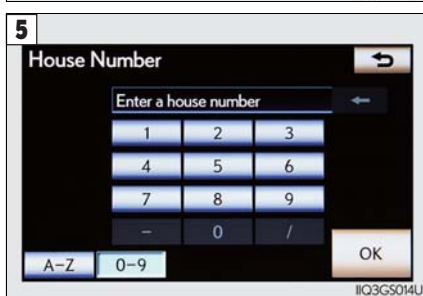


## ■ Search points of interest




- 1** Press the "MENU" button on the Remote Touch.  
Please refer to page 64 for the Remote Touch operation.

- 2** Select "Destination".

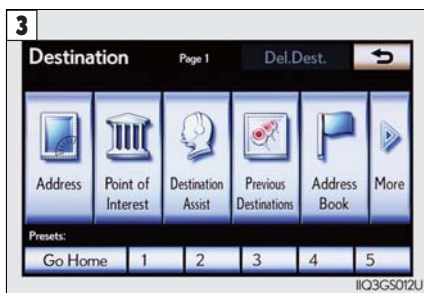

- 3** Select "Point of Interest".

## ► Search by name

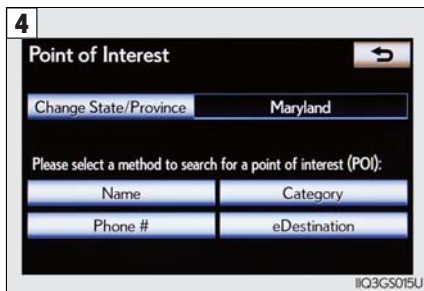

- 4** Select "Name".



- 5** Input the name of the point of interest and select "OK".


- 6** Select the screen button of the desired destination.

- 7** Select "Go to".

- 8** Select "OK".



#### ► Search by category

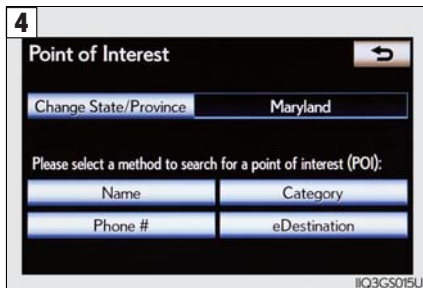

4 Select "Category".



5 Select "Near a Destination".

6 Select the screen button of the desired destination and set screen the search point.


7 Select the desired point of interest category from the displayed list.

8 Select the screen button of the desired item.

9 Select "Go to".

10 Select "OK".

#### ► Search by telephone number

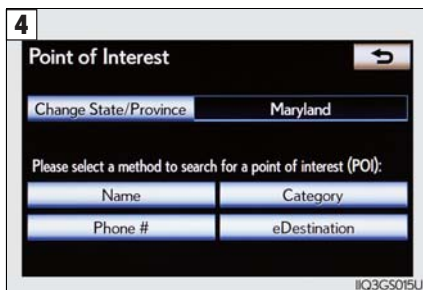

4 Select "Phone #".



5 Input a telephone number and select "OK".

6 Select "Go to".

7 Select "OK".



## Hands-free System For Cellular Phone

### Bluetooth® phone pairing

Compatible Bluetooth®-equipped phones can be connected to the vehicle, enabling hands-free operation. Please refer to the cellular phone manufacturer's user guide for pairing procedures, or go to <http://www.lexus.com/MobileLink> for more phone information.



To use a Bluetooth® phone, it is necessary to first register it in the system.

- 1 Press the "MENU" button on the Remote Touch.  
Please refer to page 64 for the Remote Touch operation.


- 2 Select "Phone".

- 3 Select "Yes".

- 4 When this screen is displayed, operate the Bluetooth® device.  
Refer to the cellular phone user's manual for cellular phone operation.

- 5 If a completion message is displayed, registration is complete.

## ■ Phonebook transfer

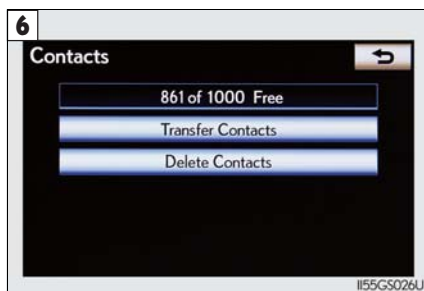

**1** Press the "MENU" button on the Remote Touch.  
Please refer to page 64 for the Remote Touch operation.

**2** Select "Setup".

**3** Select "Phone".

**4** Select "Phonebook".

**5** Select "Manage Contacts".

**6** Select "Transfer Contacts".

**7** Select "Update Contacts".

**8** Transfer the phonebook data to the system using the cellular phone.  
Refer to the cellular phone user's manual for cellular phone operation.

Phonebook transfer may not be possible depending on phone model.


## ■ Registering a speed dial




- 1** Press the "MENU" button on the Remote Touch.  
Please refer to page 64 for the Remote Touch operation.
- 2** Select "Setup".
- 3** Select "Phone".
- 4** Select "Phonebook".
- 5** Select "Manage Speed Dials".
- 6** Select "New".
- 7** Select the data you want to register.
- 8** Select the desired phone number.
- 9** Select the button you want to register in.

## ■ Calling by name

You can call by giving a name registered in the phonebook. For details, refer to the "Owner's Manual" and "Navigation System Owner's Manual".

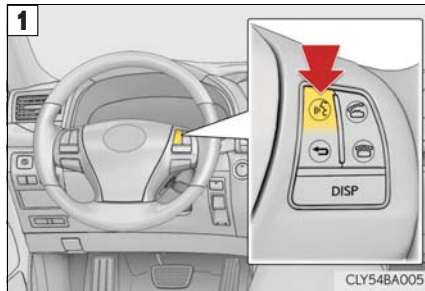

**1** Press .

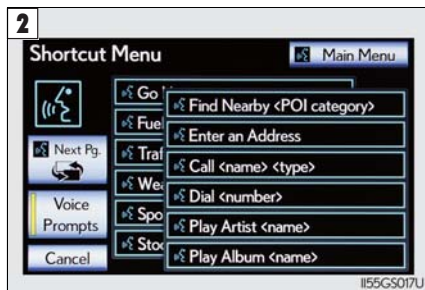

**2** Following the system guidance, wait for the beep and then after saying "Call" say the desired name, or the name and type of phone.

**3** Following the system guidance, wait for the beep and then say "Dial".



: Pressing this switch turns the voice command system on. Say a command after the beep.

## ■ Calling by speed dial




**1** Press the "MENU" button on the Remote Touch. Please refer to P.64 for the Remote Touch operation.

**2** Select "Phone".




- 3** Select "Speed Dials".

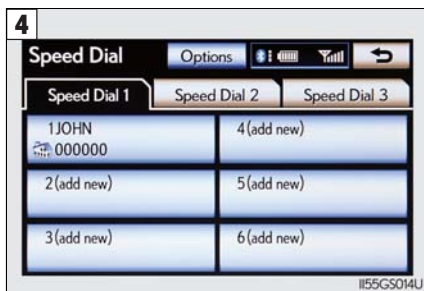

- 4** Select the desired number to call.


## ■ Calling using SMS/MMS message




- 1** Press the "MENU" button on the Remote Touch.  
Please refer to P.64 for the Remote Touch operation.
- 2** Select "Phone".
- 3** Select "Messages".
- 4** Select "SMS/MMS" tab.
- 5** Select the desired received message from the displayed list.
- 6** Press  on the steering wheel.


The tab display may vary depending on the type of cellular phone.

## ■ Receiving a call

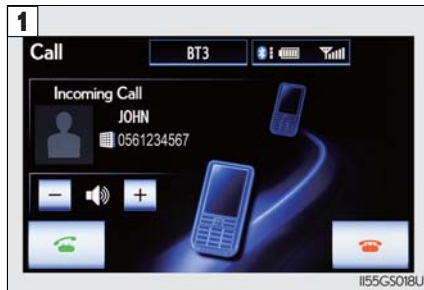


- 1** When a call is received, this screen is displayed with a sound.

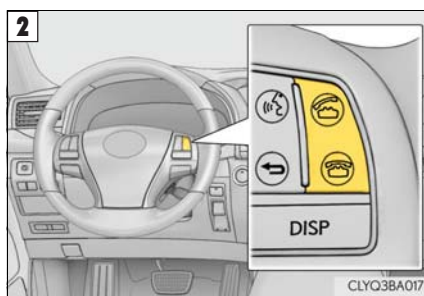

- 2** Press  on the steering wheel to talk on the phone.

To refuse the call, press  on the steering wheel.

## ■ Steering switches

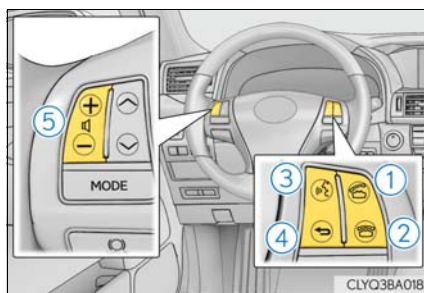

- ① Sending/Receiving/"Phone" screen display
- ② End call/Refuse call
- ③ Start the voice command system
- ④ Return to the previous screen
- ⑤ Increases/decreases volume

## Audio System

### Audio control screen

Follow the procedure below to display the audio control screen.



- 1 Press the "MENU" button on the Remote Touch.  
Please refer to page 64 for the Remote Touch operation.  
The "Menu" screen will be displayed.
- 2 Using the Remote Touch, select "Radio" or "Media" and select each tab.

### Side Display




Operations such as selecting a preset station or track are carried out on the screen.

- 1 Changing the audio mode
- 2 Selecting a radio station that has been registered to the preset buttons, track/file or chapter

### Remote control (steering wheel switches)

Some audio features can be controlled using the switches on the steering wheel.

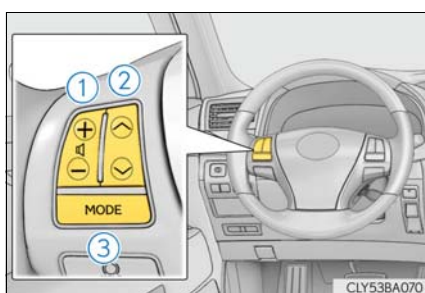

- 1 Increases/decreases volume
- 2 Radio mode: Selects a radio station/channel  
Audio CD mode: Selects a track  
MP3/WMA disc mode: Selects a file and folder  
DVD mode: Selects a chapter  
iPod mode: Selects a track
- 3 Press: Turns the power on, selects audio source  
Press and hold: Mute/unmute or pause/resume the current operation



## Basic operation



- ① Audio sources
  - AM: AM radio
  - FM: FM radio
  - SAT: Satellite radio
  - Apps (if equipped): Internet radio broadcast
  - DISC: DVD player/CD player
  - iPod: iPod
  - USB: USB memory
  - BT Audio: Bluetooth® audio
  - AUX: Auxiliary audio device
- ② Sound quality modes
- ③ Power/Volume
- ④ Mute/unmute or pause/resume the current operation

## Radio



- ① Preset stations/channels
- ② Scanning for receivable stations/channels
- ③ Using HD Radio™ Technology (if equipped)
- ④ Adjusting the frequency
- ⑤ Preset turning/seeking the frequency

## Entering station presets

- 1 Select the desired station by using the tune, the seek or the scan function.
- 2 Using the Remote Touch, select one of the left side screen buttons and hold it until a beep is heard, indicating that the station has been set.  
There are 6 sets of 6 presets. There is a total of 36 presets.

## ■ DVD player/CD player

### ■ Playing an audio CD



- ① Random playback
- ② Repeat play
- ③ Playback/pause
- ④ Selecting a track
- ⑤ CD eject

### ■ Playing a CD with MP3/WMA files



- ① Random playback
- ② Repeat play
- ③ Playback/pause
- ④ Selecting a file
- ⑤ Folder selection
- ⑥ File selection/fast forward/rewind
- ⑦ CD eject

## ■ Playing a DVD



- ① Image display (full screen)
- ② Reverse
- ③ Stop
- ④ Playback/pause
- ⑤ Fast forward
- ⑥ Chapter selection
- ⑦ DVD eject


## ■ Operating an iPod



- ① Select play mode
- ② Playback/pause
- ③ Track selection
- ④ Repeat play
- ⑤ Shuffle playback

## ■ Rear seat audio controls (if equipped)

Some front audio features can be controlled from the rear seats.

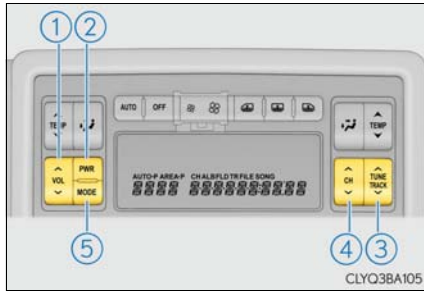

- ① Volume
- ② Power
- ③ Track or file etc.
- ④ Preset station or folder etc.
- ⑤ Audio sources

## ■ Portable Audio Device Ports


These ports can be used to connect a portable audio device and listen to it through the vehicle's speakers.



Open the console box, open the cover and connect the portable audio device.

## Lexus Climate Concierge

The climate control seats\*/seat heater\* on each seat and heated steering wheel\* are automatically controlled according to the set temperature of the air conditioning system, outside temperature, cabin temperature, etc. Lexus Climate Concierge allows a comfortable condition to be maintained without adjusting each system.

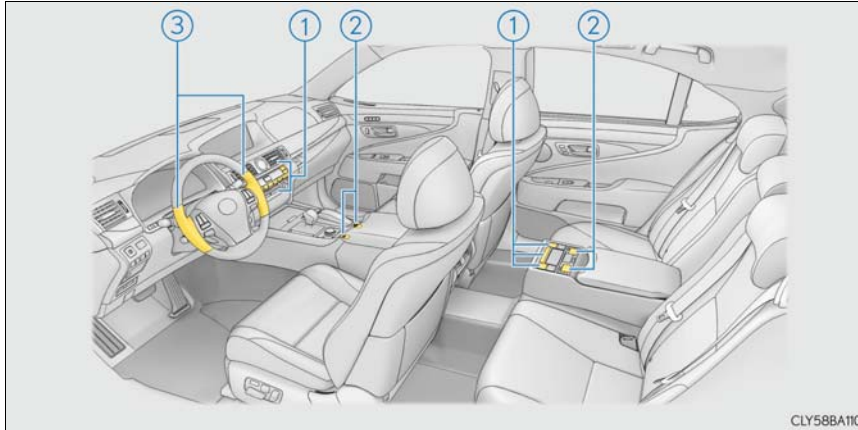


- ① Automatic air conditioning system (→P.84, 87)  
Set the air conditioning system to automatic mode.  
The temperature for the driver's seat, front passenger's seat and both rear seats\* can be adjusted individually.
- ② Climate control seats\*/seat heaters\* (→P.89)  
Select "AUTO" mode on each seat.  
Seat heater, off, ventilation\* or seat cooler\* is automatically selected according to the set temperature of the air conditioning system, outside temperature, etc.
- ③ Heated steering wheel\* (→P.88)  
Turned on automatically according to the outside and cabin temperature when the engine is started.  
Operates for a maximum of 30 minutes.

\*: If equipped

## Front Air Conditioning System


### ► Control screen (without rear air conditioning system)

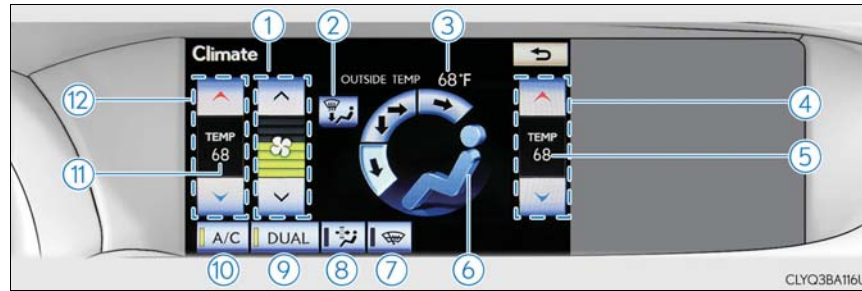

### ► Control screen (with rear air conditioning system)



### ► Control panel

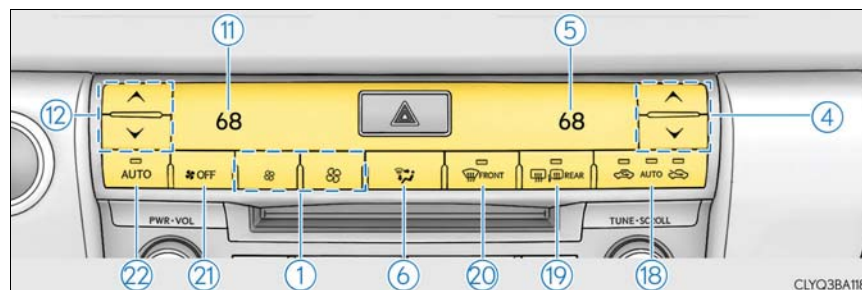


- ① Fan speed control
- ② Air flows to the feet and the windshield defogger operates
- ③ Outside temperature
- ④ Right-hand front seat side temperature control
- ⑤ Right-hand front seat side temperature display
- ⑥ Air outlet selector
- ⑦ Windshield wiper de-icer
- ⑧ Micro dust and pollen filter
- ⑨ DUAL mode
- ⑩ Cooling and dehumidification function on/off
- ⑪ Left-hand front seat side temperature display
- ⑫ Left-hand front seat side temperature control
- ⑬ Left-hand front seat side air outlet selector
- ⑭ Rear air conditioning operation screen
- ⑮ Right-hand front seat side air outlet selector
- ⑯ Air purifier and rear air conditioning function on/off
- ⑰ 4-ZONE mode
- ⑱ Outside air or recirculated mode
- ⑲ Rear window and outside rear view mirror defoggers
- ⑳ Windshield defogger
- ㉑ Off
- ㉒ Automatic mode



## ■ Side Display


### ► Without rear air conditioning system

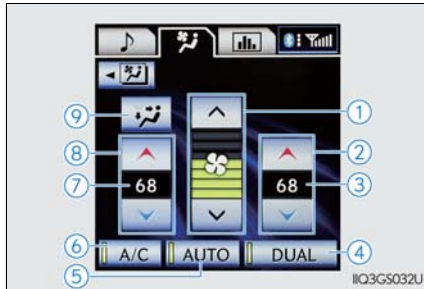

Operations such as changing the air outlets or fan speed are carried out on the screen.

- ① Fan speed control
- ② Right-hand front seat side temperature control
- ③ Right-hand front seat side temperature display
- ④ DUAL mode
- ⑤ Automatic mode
- ⑥ Cooling and dehumidification function on/off

### ► With rear air conditioning system

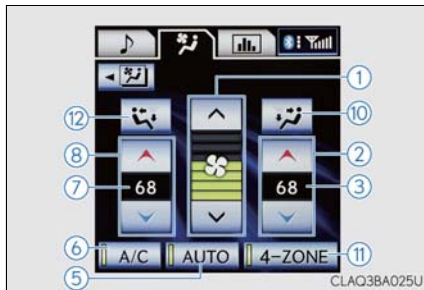

- ① Fan speed control
- ② Right-hand front seat side air outlet selector
- ③ Right-hand front seat side temperature display
- ④ Right-hand front seat side temperature control
- ⑤ 4-ZONE mode
- ⑥ Left-hand front seat side air outlet selector
- ⑦ Left-hand front seat side temperature display
- ⑧ Left-hand front seat side temperature control
- ⑨ Front seat air outlet selector
- ⑩ Right-hand front seat side air outlet selector
- ⑪ 4-ZONE mode
- ⑫ Left-hand front seat side air outlet selector

## ■ Using the automatic mode

Press the automatic mode button to turn on the airflow and the driver's side temperature control buttons to adjust the temperature.

## ■ Adjusting the temperature

### ► Without rear air conditioning system

In dual mode, driver and passenger side temperature settings can be adjusted separately.

Press the passenger's side temperature control buttons to adjust the temperature for the passenger side.

To cancel the dual mode, press the DUAL mode button.

### ► With rear air conditioning system


In individual mode, the temperature for the driver's, front passenger's and rear seats can be adjusted separately.

Press the passenger's side temperature control buttons to adjust the temperature for the passenger side.

To adjust the temperature for the rear seats, see page 88.


To cancel the individual mode, press the 4-ZONE mode button.

## Rear Air Conditioning System (if equipped)

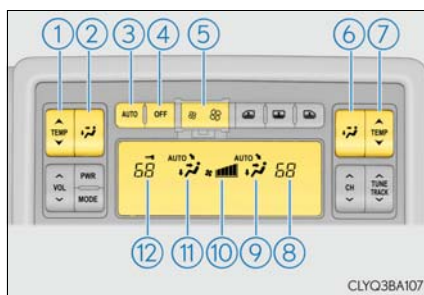

- ① Left-hand rear seat side temperature control
- ② Left-hand rear seat side air outlet selector
- ③ Automatic mode
- ④ Off
- ⑤ Fan speed control
- ⑥ Right-hand rear seat side air outlet selector
- ⑦ Right-hand rear seat side temperature control
- ⑧ Right-hand rear seat side temperature display
- ⑨ Right-hand rear seat side air flow display
- ⑩ Fan speed display
- ⑪ Left-hand rear seat side air flow display
- ⑫ Left-hand rear seat side temperature display

## ■ Front controller

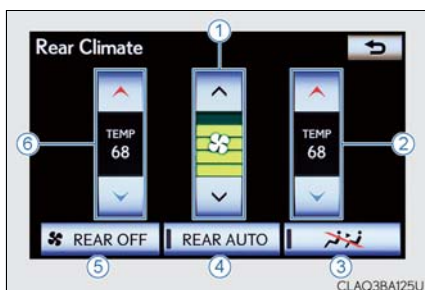

- ① Fan speed control
- ② Right-hand rear seat side temperature control and display
- ③ Disabling the switches on the rear arm-rest
- ④ Automatic mode
- ⑤ Off
- ⑥ Left-hand rear seat side temperature control and display

## Heated Steering Wheel (if equipped)

The left and right grip portions of the steering wheel can be warmed.



### ► Automatic operation

Operates automatically according to the outside and cabin temperature when the engine switch is turned to IGNITION ON mode. Automatic operation can be turned off using the switch.

The indicator light comes on when the heater is operating.


### ► Manual operation

Turns the heated steering wheel on/off.

The indicator light comes on when the heater is operating.

## Climate Control Seats (if equipped)/ Seat Heaters (if equipped)

### ■ Front climate control seats

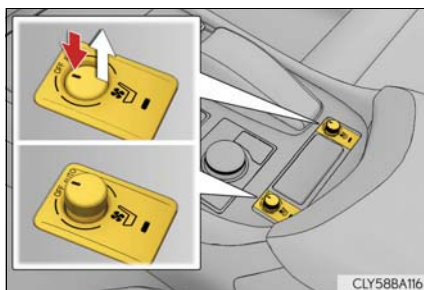


- 1** Press the knob to release the lock.  
Press the knob to lock it when not in use.

#### ► AUTO setting



- 2** Turn the knob to the "AUTO" position.  
When set to "AUTO" mode, seat heater, off, ventilation or seat cooler is automatically selected according to the set temperature of the air conditioning system, outside temperature, etc.


#### ► Manual setting

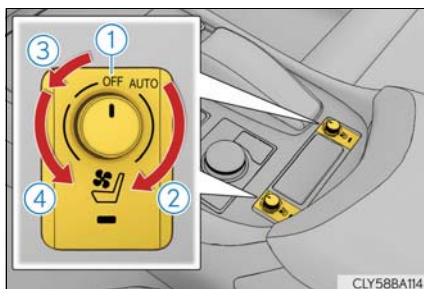


- 2** Set the temperature by turning the knob to the left or right.
  - ① Off
  - ② Seat heater
  - ③ Ventilation
  - ④ Seat cooler

## ■ Rear climate control seats (if equipped)/seat heaters (if equipped)

### ▶ 5-seat models

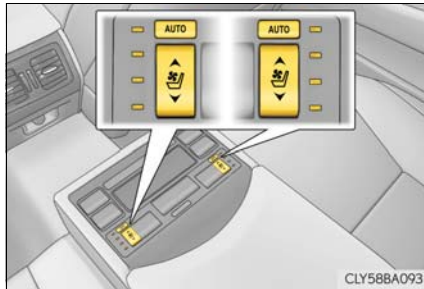

### ▶ 4-seat models

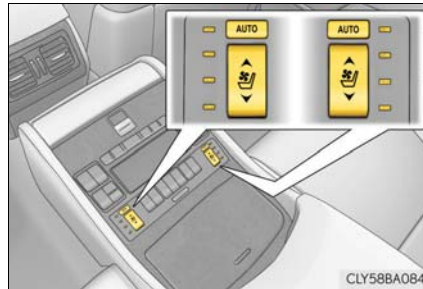

### ■ AUTO setting



The switch turned on/off.

When set to "AUTO" mode, the indicator illuminates.

When set to "AUTO" mode, seat heater, off, ventilation\* or seat cooler\* is automatically selected according to the set temperature of the air conditioning system, outside temperature, etc.

\*: Vehicles with climate control seats

## ■ Manual setting

The strength of the seat heater and seat cooler can be adjusted to 3 levels each.

Seat heater<sup>\*1</sup>: When the system is off, pressing “▲” turns the seat heater on.

Pressing “▲” increases the level and pressing “▼” lowers the level.

Seat cooler<sup>\*2,3</sup>: When the system is off, pressing “▼” turns the seat cooler on.

Pressing “▼” increases the level and pressing “▲” lowers the level.



Seat heater<sup>\*1</sup>

- ① Low
- ② Mid
- ③ Hi

Seat cooler<sup>\*2,3</sup>


- ④ Low
- ⑤ Mid
- ⑥ Hi

<sup>\*1</sup>: The indicator illuminates in amber.

<sup>\*2</sup>: The indicator illuminates in blue.

<sup>\*3</sup>: Vehicles with climate control seats


## Rear Sunshade/Rear Door Sunshades

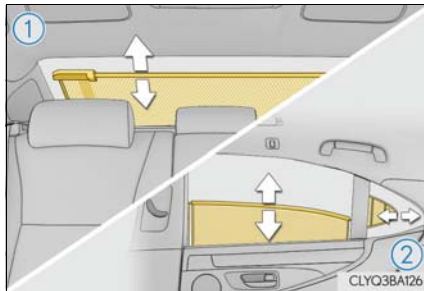

- ① Rear sunshade
- ② Rear door sunshades (if equipped)


### ■ Raising/Extending from the front seat

#### ► Vehicles without power rear seat

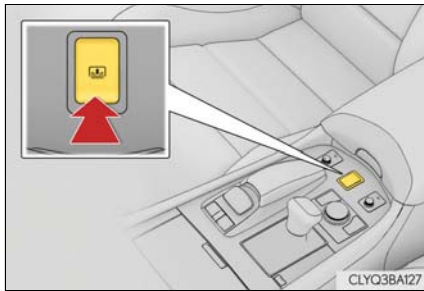

Raises the rear sunshade  
Press the button again to lower it.


#### ► Vehicles with power rear seat

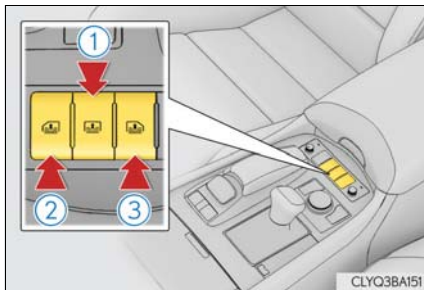

- ① Raises the rear sunshade
- ② Extends the rear door sunshade (left side)
- ③ Extends the rear door sunshade (right side)

Press the button again to lower or retract the sunshade(s).

#### ► Vehicles with relaxation seat

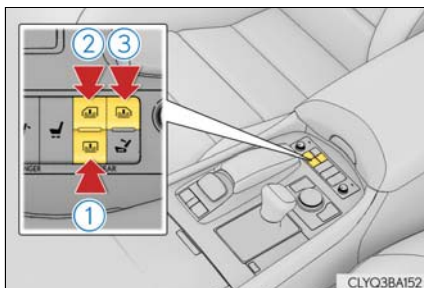


- ① Raises the rear sunshade
- ② Extends the rear door sunshade (left side)
- ③ Extends the rear door sunshade (right side)

Press the button again to lower or retract the sunshade(s).




## ■ Raising/Extending from the rear seat

### ► 5-seat models (vehicles without power rear seat)

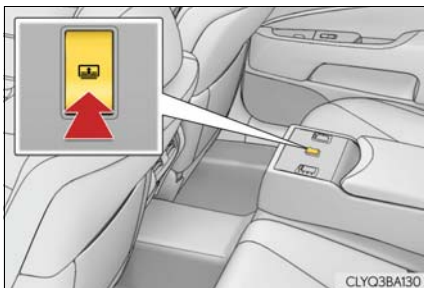

Raises the rear sunshade  
Press the button again to lower it.


### ► 5-seat models (vehicles with power rear seat)

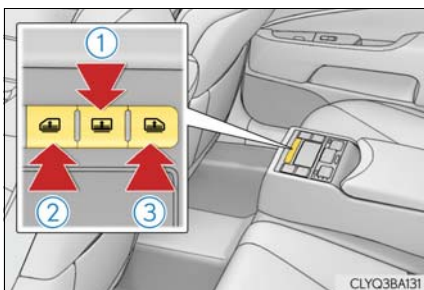

- ① Raises the rear sunshade
- ② Extends the rear door sunshade (left side)
- ③ Extends the rear door sunshade (right side)

Press the button again to lower or retract the sunshade(s).

### ► 4-seat models

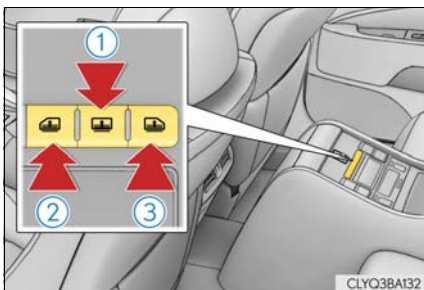

- ① Raises the rear sunshade
- ② Extends the rear door sunshade (left side)
- ③ Extends the rear door sunshade (right side)




Press the button again to lower or retract the sunshade(s).

The rear sunshade automatically lowers to ensure visibility when reversing.

## Voice Command System

### Basic operation






- 1** Press  on the steering wheel.
- 2** - If you know the command:  
Press  again.  
- If you do not know the command:  
Follow the voice guidance to learn the command and then press  again.
- 3** Say a command after the beep.

Continue on to pages 95-96 for a detailed list of Voice Commands for the following categories:

Set a Destination .....	page 95
Use the Phone. ....	page 95
Play Music. ....	page 95
Get Information .....	page 96
Select audio mode. ....	page 96
Climate/air conditioning system command .....	page 96

#### ■ Important voice commands information and tips

- Voice commands can be used while driving.
- You must wait until after the beep to say a command.
- In vehicles with a navigation system, a large TALK icon  will appear on the navigation screen to prompt you to say a command.
- If you know what command to use, you can press  at any time to interrupt the voice guidance.
- If a desired outcome is not shown, or if no selections are available, press  on the steering wheel to return to the previous screen.

**NOTE:** When inputting voice commands you must wait until after the beep to speak.

## ■ Command list

### Set a Destination (vehicles with navigation system)

Command	Action
"Find Nearby <POI category>"	Displays a list of <POI category>* near the current position.
"Enter an Address"	Enables setting a destination by saying the address.
"Go Home"	Displays the route to home.
"Call Destination Assist"	Connects Lexus Enform with Safety Connect response center.
"Destination by Phone Number"	Enables setting a destination by saying the phone number.

\*: For example; Gas stations, Restaurants, etc.

### Use the Phone

Command	Action
"Call <name> <type>"	Calls made by saying a name from the phonebook. For example: Say "Call John Smith", "Call John Smith, mobile" etc.
"Dial <number>"	Calls made by saying the phone number. For example: Say "Dial 911", "Dial 5556667777" etc.
"International Call"	Calls international numbers by saying the phone number.

### Play Music

Command	Action
"Play Artist <name>"	Plays tracks by the selected artist. For example: Say "Play artist <XXXXX>"*
"Play Album <name>"	Plays tracks from the selected album. For example: Say "Play album <XXXXX>"*
"Play Song <name>"	Plays the selected track. For example: Say "Play song Summertime", "Play song Concerto in A Major" etc.
"Play Playlist <name>"	Plays tracks from the selected playlist. For example: Say "Play playlist My Favorite Songs", "Play Playlist Classic Hits" etc.

\*: Say the desired artist name or album name in the place of the "<>".

#### Get Information (vehicles with navigation system)

Command	Action
"Traffic"	Displays the traffic incident list.
"Weather"	Displays weather information.
"Sports Scores"	Displays the sports list.
"Stock Quotes"	Displays the stocks list.
"Fuel Prices"	Displays the fuel prices list.
"Lexus Insider"	Displays the Lexus insider list.

#### Select audio mode

Command	Action
"Radio", "AM", "FM", "Satellite radio", "Disc", "Auxiliary", "Bluetooth* audio", "iPod", "USB audio"	Change the audio mode.
"Audio on"	Turns the audio system on.
"Audio off"	Turns the audio system off.

\*: Bluetooth is a registered trademark of Bluetooth SIG, Inc.

#### Climate/air conditioning system command

Command	Action
"Automatic climate control"	Turns air conditioning system on and off.
"Warmer"	Turns temperature up.
"Cooler"	Turns temperature down.

"Select audio mode" and "Climate/air conditioning system command" are enable when expanded voice commands are turned "On". Refer to the "Owner's Manual" and "Navigation System Owner's Manual".


## Garage Door Opener

The garage door opener can be programmed to operate garage doors, gates, entry doors, door locks, home lighting systems, security systems, and other devices.

The garage door opener (HomeLink® Universal Transceiver) is manufactured under license from HomeLink®.

### ■ Programming the HomeLink®


The HomeLink® compatible transceiver in your vehicle has 3 buttons which can be programmed to operate 3 different devices. Refer to the programming method below appropriate for the device.

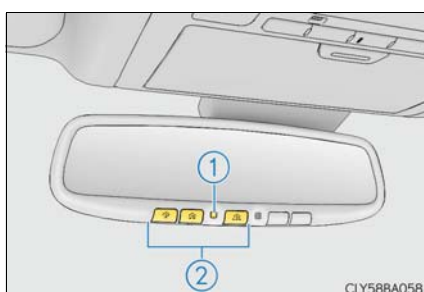

① Indicator

② Buttons

## ■ Programming HomeLink®

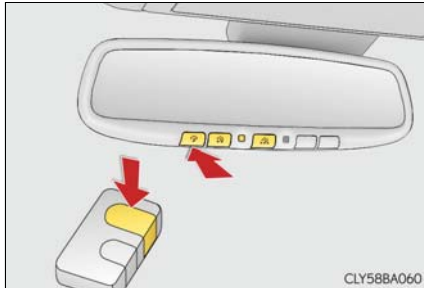

- 1** Hold your hand-held transmitter 1 to 3 in. (25 to 75 mm) of the HomeLink® buttons.
- 2** Press and hold down the desired HomeLink® button.
- 3** For U.S.A. owners:  
While pressing the HomeLink® button, press and hold down the button on the hand-held transmitter until the indicator light changes from a slow to a rapid flash.  
For Canadian owners:  
While pressing the HomeLink® button, repeatedly press and release (cycle) the button on the hand-held transmitter every 2 seconds until the indicator light changes from a slow to a rapid flash.

If your garage door is of the Rolling Code type:

- 4** Press the learn button.
- 5** Press and hold the vehicle's programmed HomeLink® button for 2 seconds and release it. Repeat this step once again.  
If the door does not open, press and release the same button once again.

## ■ Programming other devices

---

For U.S.A. owners:

To program an entry gate, see the Owner's Manual.


To program other devices, contact your Lexus dealer.

For Canadian owners:

To program all other devices, follow the same procedure as for garage door programming.

## ■ Operating HomeLink®

---

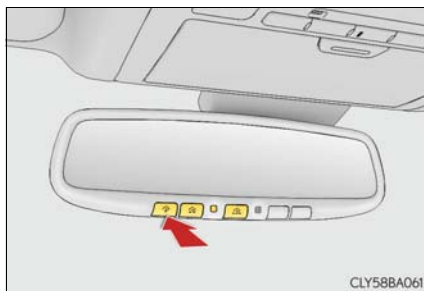

Press the appropriate HomeLink® button.  
The indicator light should come on.


## ■ Safety Connect (if equipped)

Safety Connect is a subscription-based telematics service that uses Global Positioning System (GPS) data and embedded cellular technology to provide safety and security features to subscribers. Safety Connect is supported by Lexus' designated response center, which operates 24 hours per day, 7 days per week.

Safety Connect service is available by subscription on select, telematics hardware-equipped vehicles.

## ■ System components

---

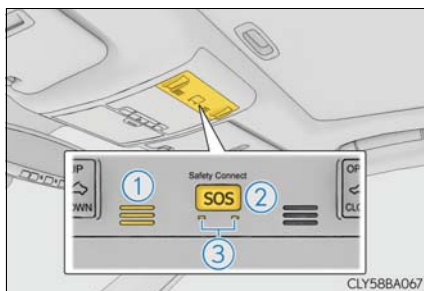

- ① Microphone
- ② "SOS" button
- ③ LED light indicators



## ■ Services

---

Subscribers have the following Safety Connect services available:

- **Automatic Collision Notification\***

In case of either airbag deployment or severe rear-end collision, the system is designed to automatically call the response center. The responding agent receives the vehicle's location and attempts to speak with the vehicle occupants to assess the level of emergency. If the occupants are unable to communicate, the agent automatically treats the call as an emergency, contacts the nearest emergency services provider to describe the situation, and requests that assistance be sent to the location.

\*: U.S. Patent No. 7,508,298 B2

- **Stolen Vehicle Location**

If your vehicle is stolen, Safety Connect can work with local authorities to assist them in locating and recovering the vehicle. After filing a police report, call the Safety Connect response center at 1-800-25-LEXUS (1-800-255-3987) and follow the prompts for Safety Connect to initiate this service.

In addition to assisting law enforcement with recovery of a stolen vehicle, Safety-Connect-equipped vehicle location data may, under certain circumstances, be shared with third parties to locate your vehicle. Further information is available at [Lexus.com](http://Lexus.com).

- **Emergency Assistance Button (SOS)**

In the event of an emergency on the road, push the "SOS" button to reach the Safety Connect response center. The answering agent will determine your vehicle's location, assess the emergency, and dispatch the necessary assistance required.

If you accidentally press the "SOS" button, tell the response-center agent that you are not experiencing an emergency.

- **Enhanced Roadside Assistance**

Enhanced Roadside Assistance adds GPS data to the already included warranty-based Lexus roadside service.

Subscribers can press the "SOS" button to reach a Safety Connect response-center agent, who can help with a wide range of needs, such as: towing, flat tire, fuel delivery, etc. For a description of the Enhanced Roadside Assistance services and their limitations, please see the Safety Connect Terms and Conditions, which are available at [Lexus.com](http://Lexus.com).

## ■ Subscription

---

After you have signed the Telematics Subscription Service Agreement and are enrolled, you can begin receiving services.

A variety of subscription terms is available for purchase. Contact your Lexus dealer, call 1-800-25-LEXUS (1-800-255-3987) or push the "SOS" button in your vehicle for further subscription details.

## Lexus Enform with Safety Connect (if equipped)

Lexus Enform with Safety Connect is a generic name for Apps, Destination Assist, eDestination, Lexus Insider, and Safety Connect.

The functions included in Lexus Enform with Safety Connect are classified into the following three functions.

For details, refer to the "Owner's Manual" and "Navigation System Owner's Manual".

### ■ Function achieved by using a cellular phone

#### ■ Services

Of the functions included with Lexus Enform with Safety Connect, only Apps can be achieved by using a cellular phone.

Apps is a service that enables the usable contents of a cellular phone to be displayed on and operated from the navigation screen.

##### ● APPS

Each time "Apps" is activated, the system checks for updates. When there are no updates available, the main menu screen will be displayed right after a screen indicating that updates are being checked for has been displayed.

#### ■ Subscription

Apps will be available on a trial period included upon purchase of a new vehicle. User registration is required to start using the service.

When a trial period has elapsed after purchasing a new vehicle, a fee will be charged to renew the contract. Services requiring a separate contract can also be used. For details, refer to <http://www.lexus.com/enform/> or call 1-800-255-3987.

### ■ Function achieved by using DCM and the navigation system

#### ■ Services

Of the functions included with Lexus Enform with Safety Connect, Destination Assist, eDestination, and Lexus Insider can be achieved by making DCM cooperate with the navigation system.

These are subscription-based telematics services that use Global Positioning System (GPS) data, embedded cellular technology to provide safety and security as well as convenience features to subscribers. The services are supported by Lexus' designated response center, which operates 24 hours per day, 7 days per week.

The services are available by subscription on select, telematics hardware-equipped vehicles.

##### ● Destination Assist

Destination Assist provides you with live assistance for finding destinations via the Lexus Enform with Safety Connect response center. You can request either a specific business, address, or ask for help locating your desired destination by category, such as restaurants, gas stations, shopping centers or other points of interest (POI).

After you tell the agent your choice of destination, its coordinates are sent wirelessly to your vehicle's navigation system.

### ● eDestination

With the eDestination feature, you can go online, via the Lexus.com owner's Web site, to select and organize destinations of your choice and then wirelessly send them to your vehicle's navigation system.

You can store up to 200 locations online to access and update at any time.

Your locations can be organized into up to 20 personalized folders.

You must first go online at [www.lexus.com/drivers/](http://www.lexus.com/drivers/) to view the Owners site where you will need to register and log in. After this, you can create your personalized folders containing the locations you wish to send to your vehicle. (See Lexus Enform with Safety Connect Guide for more information.)

### ● Lexus Insider

Lexus Insider is an optional service that can send audio messages, or articles, to participating owners' vehicles via the navigation system. Potential Lexus Insider subjects might include, for example, Lexus vehicle technology tips, updates on regional Lexus events, or audio excerpts from Lexus Magazine articles. Up to 20 articles can be stored at a time.

You may opt out of receiving Lexus Insider messages at any time.

### ■ Subscription

After you have signed the Telematics Subscription Service Agreement and are enrolled, you can begin receiving services. A variety of subscription terms is available for purchase. Contact your Lexus dealer, call 1-800-25-LEXUS (1-800-255-3987), or select the "Destination Assist" in your vehicle for further subscription details.

## ■ Function achieved by using DCM

---

### ■ Services

Of the functions included with Lexus Enform with Safety Connect, Safety Connect can be achieved by using DCM.

- Safety Connect (→P.99)

## **XM Services (if equipped)**

XM services are subscription-based XM Satellite Radio services to provide convenient features to subscribers.

For details, refer to the "Owner's Manual" and "Navigation System Owner's Manual".

### **Services**

With an active XM subscription, the following features are available:

- **XM Sports and Stocks<sup>\*1</sup>**

XM Sports and Stocks is a service included with an XM Satellite Radio subscription. This service is also available with an XM TravelLink subscription. With this service, you can receive updates via the navigation system on your personally selected sports teams and stocks.

- **XM Fuel Prices<sup>\*2</sup>**

XM Fuel Prices is a service included with an XM TravelLink subscription. It enables the navigation system to display current fuel prices and gas station locations, which can be set as a destination if desired.

- **XM NavWeather<sup>TM\*2</sup>**

The subscription-based XM NavWeather<sup>TM</sup> service allows the navigation system to display weather information on the map screen.

- **XM NavTraffic<sup>®\*2</sup>**

The subscription-based XM NavTraffic<sup>®</sup> service allows the navigation system to display traffic information on the map screen.

<sup>\*1</sup>: Available at no extra charge with an active XM Satellite Radio subscription.

<sup>\*2</sup>: Available via separate XM subscription(s).

### **Subscription**

XM NavTraffic<sup>®</sup>, XM NavWeather<sup>TM</sup> and XM TravelLink require separate XM subscription(s). XM Sports<sup>\*</sup>, XM Stocks<sup>\*</sup> and XM Fuel Prices are available with an XM TravelLink subscription. After a 90-day trial, you must contact XM and set up the appropriate XM subscription(s) to continue receiving these services.

<sup>\*</sup>: XM Sports and XM Stocks are included with an XM Satellite Radio subscription.